

Position Library Guide 30/03/2026

› Import guide version 1.1

Position Library & Standard AluK Glazing

The below guide details how to import the AluK position libraries into your LogiKal installation.

› AluK may provide customers with an initial setup of the Logikal estimation software, including the creation and population of a "position library" containing pre-configured AluK window, door, and screening elements.


› However, responsibility for the ongoing maintenance, accuracy, and management of the position library rests solely with the fabricator/customer. This includes, but is not limited to, the updating and modification of all stored positions, configurations, and associated data within the system.

› This allocation of responsibility reflects the bespoke nature of individual customer setups, which may incorporate unique combinations of glazing specifications, colours, third-party components, and hardware. As these variables differ between customers and evolve over time, AluK is not able to maintain or manage position libraries on an ongoing basis.

› Customers are therefore responsible for ensuring that all data held within their Logikal position library remains accurate, current, and fit for purpose. AluK will assist as and when we can in training on how to perform these changes if necessary.


Import Process

- › 1. Download the AluK Libraries folder from the Technical Section of the portal.
- › 2. Navigate to your downloads folder within file explorer. If you cannot locate the downloads folder, paste this into your search bar: %userprofile%\downloads
- › 3. Right click the zipped folder "AluK Libraries.zip" and select "Extract All", then "Extract":

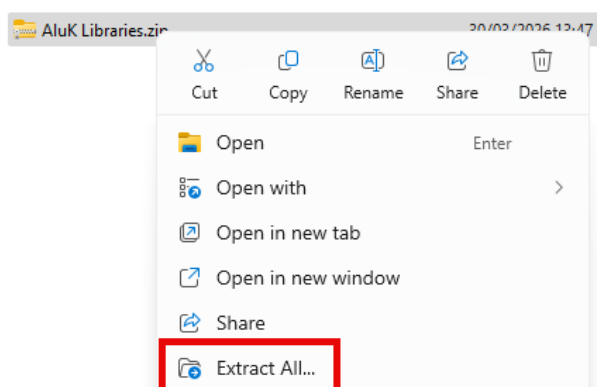

- › 4. Open the extracted folder, which will have a sub-folder called "AluK Libraries".
- › 5. Copy the "AluK Libraries" folder.

- › 6. On your desktop, right click the LogiKal shortcut and select "Open File Location".

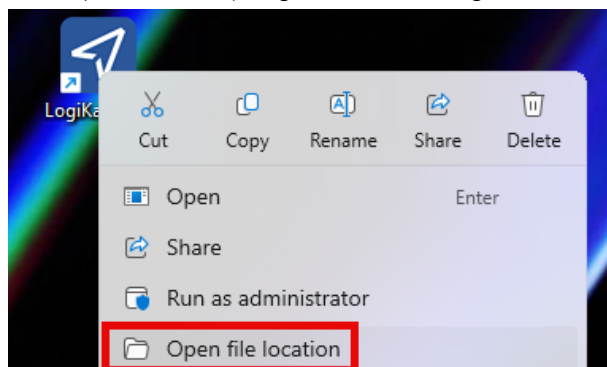

- › 7. When the folder appears, open the "lib" folder:

Name	Date modified	Type
AluK Updater	07/07/2025 15:04	File folder
bin	27/03/2026 11:37	File folder
cad	07/07/2025 15:04	File folder
dok	07/07/2025 15:04	File folder
dwgexpress	27/03/2026 07:58	File folder
Etiketten	07/07/2025 15:04	File folder
FREECAD	20/11/2025 15:42	File folder
gridlib	27/03/2026 11:27	File folder
gridlib-backup	07/07/2025 15:04	File folder
kndstamm	30/03/2026 13:35	File folder
Konstant	30/03/2026 13:35	File folder
lib	30/03/2026 13:22	File folder

- › 8. Paste the "AluK Libraries" folder into the lib folder.
- › 9. Open LogiKal.
- › 10. Select "General" (Top Left) > User Database > Fillings > Insulation Glass Units.
- › 11. Select "Import From" at the bottom and then select the AluK Glazing.xlsx File.
- › 12. Click Next > Next > Finish to import the standard AluK Glazing.
- › 13. Select "Close" in the bottom right corner.
- › 14. Select "General" (Top Left) > Programs > Position Library. You should now have an "AluK Libraries" folder, which you can edit and change the glazing as desired.

If you need to report a bug or have any further queries, please contact Software.UK@aluk.com.

Kind Regards,

Ben Knight

Product & Software Support Technician